

Connection instructions OFS Universal

Switchable primary connection 400–420–440–460–480–500 VAC.

Secondary for series or parallel connection.

PRIMARY CONNECTION 400–420–440–460–480–500 VAC

At:	Connect at:
400 V	20 - 420
420 V	0 - 420
440 V	20 - 460
460 V	0 - 460
480 V	20 - 500
500 V	0 - 500



SECONDARY OUTPUT 24/48V

Article number	Type
50224	OFS-50
100224	OFS-100
250224	OFS-250
500224	OFS-500
1000224	OFS-1000

SECONDARY CONNECTION FOR 24 V

Jumper

A:0 with B:0

Connect to

A:0

and

A:24V with B:24V

B:24V


SECONDARY CONNECTION FOR 48V V

Jumper

A:24V with B:0

Connect to

A:0 and B:24V

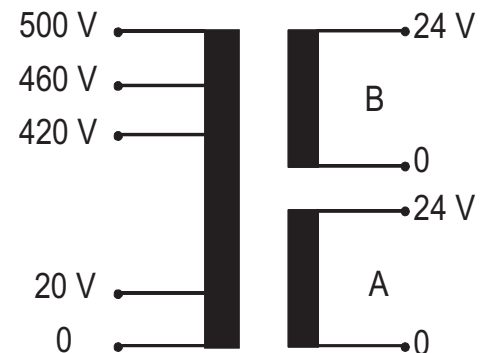

SECONDARY OUTPUT 115/230V

Article number	Type
502115	OFS-50
1002115	OFS-100
2502115	OFS-250
5002115	OFS-500
10002115	OFS-1000

SECONDARY CONNECTION FOR 115 V

Jumper

A:0 with B:0

Connect to

A:0

and

A:115V with B:115V

B:115V

SECONDARY CONNECTION FOR 230V

Jumper

A:115V with B:0

Connect to

A:0 and B:115V

